

Assembly manual

Tree grate model Hunte

Index

Regulation	2
Situation Tree-Grate	3
Section	5
Assembly tree grate	7



Assembly manual

Tree grate model Hunte



Regulation

Installation and maintenance may be only performed with original components.

The national and international rules must be used. ANAE Streetfurniture is not responsible for damage caused by improper use. Installation has to be done by qualified personnel.

Tree grates may only be used for prescribed purpose.

Vehicle pressure may not be applied to the treegrates before completion of assembly protocol.


When, using M12 sets, the surface of the grates is not level across the segments after placement M10 sets need to be applied. ANAE can supply these sets.

The images in this document are indicative for the model. Some discrepancies between image and product may occur with different sizes.

Assembly manual

Tree grate model Hunte

with light frame

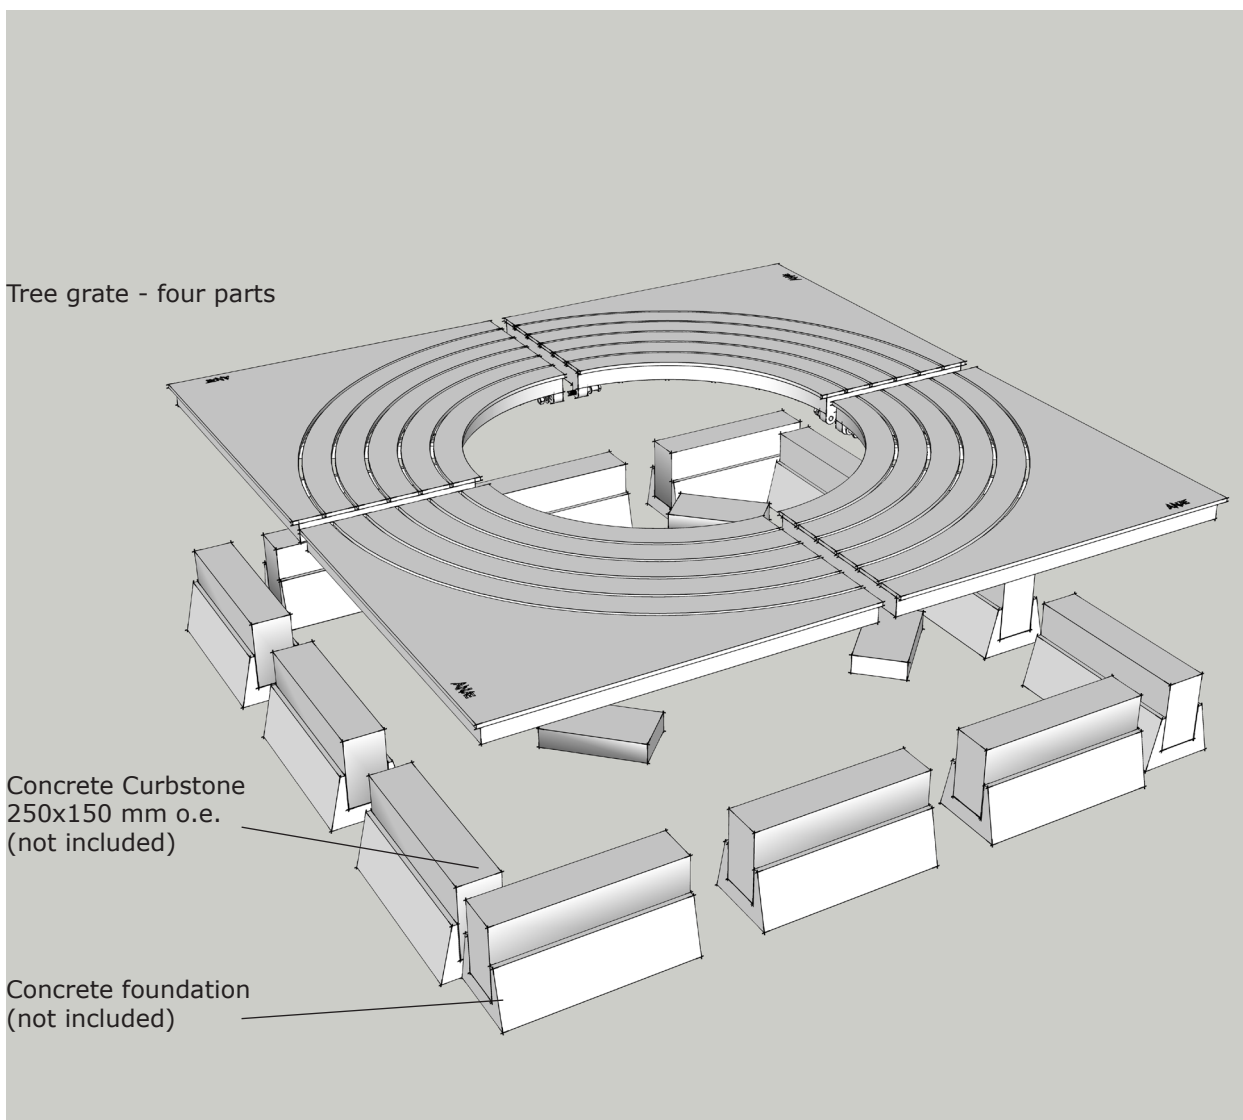

Pic. 1


Attention:

With grates larger than 2 meters support tiles need to be applied around the opening in the grate.
Only by properly installing the system, a traffic class C for trucks according to NEN-EN 1991-2: 2003 has been achieved.

Assembly manual

Tree grate model Hunte

Section

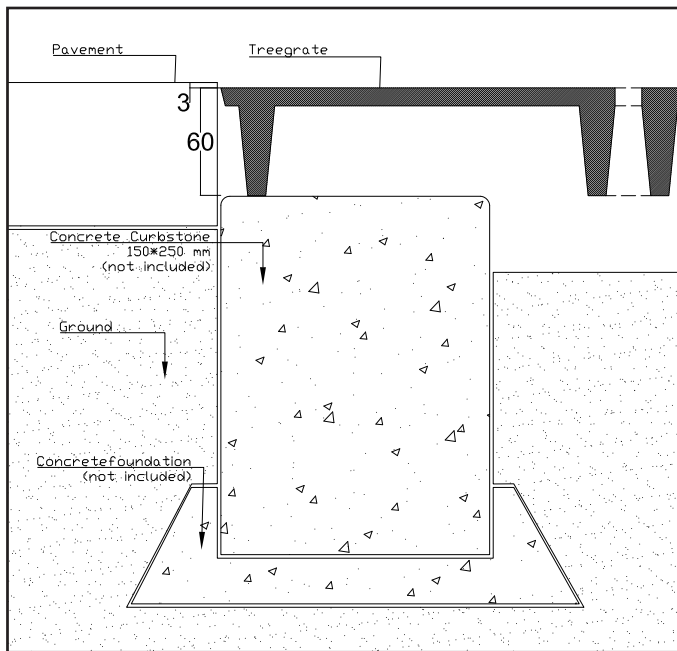


Pic. 2
Strengthened grate

Assembly manual

Tree grate model Hunte

Assembly tree grate

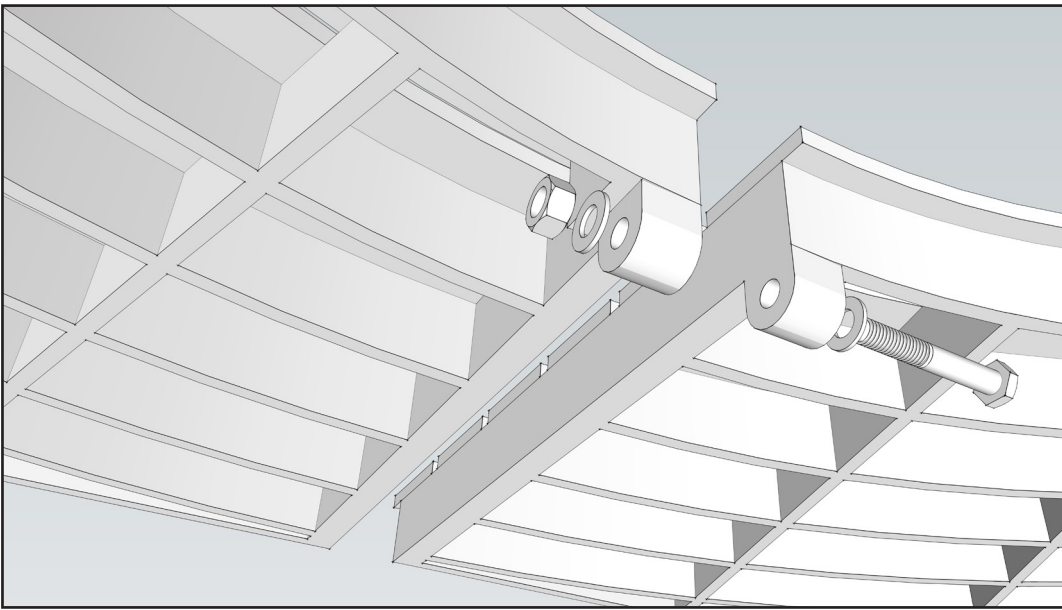

Pic. 3

Tree grate model Hunte
4 Bolts DIN933 M12
8 Rings DIN125
4 Nuts DIN985 M12

ANÆ

Streetfurniture